

## Programming remote directly to motor

1. Press and hold both buttons 1 & 2 on the new remote at the same time. The red light on the remote will illuminate. Continue to hold both buttons on the remote until the light goes out.
2. You have now successfully switched the frequency over to the correct frequency for your motor.
3. Locate the Code Set button on your motor. Some motors have a see-through plastic cover of the buttons, if so, please remove this
4. Press the Code Set button on the motor once and immediately release. A red light on the motor will illuminate.
5. Press and release the button on the new remote you wish to code to the motor for 1-2 secs and the light on the motor will begin to flash.
6. Press the same button on the new remote and the light on the motor will stop flashing. The remote is now programmed and will be able to operate the door.

[www.remotepro.com.au](http://www.remotepro.com.au)

## WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:

- Battery is hazardous: **NEVER** allow children near batteries.
- If battery is swallowed, immediately notify a doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with the same size and type battery
  - **DO NOT** recharge, disassemble, heat above 100° C or incinerate
- Battery will cause **SEVERE** or **FATAL** injuries in 2 hours or less if swallowed or placed inside any part of the body.

