


Seip Coding Instructions

1. Depending on your motor's model you may need to remove a screw to allow the hinged cover to open. Once open locate the RED push button which is located on the main circuit board panel.
2. Press this button for approximately 3-5 seconds until the LED indicator light begins to flash. Once flashing this indicates that your motor has successfully entered learn mode.

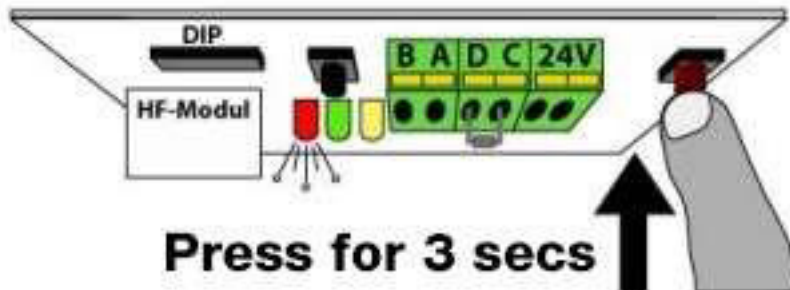

3. On the new remote, press and hold any button (should only take about 1-2 seconds) that you wish to operate the door. The LED on the motor should stop flashing once the remote has been programmed.

To erase all remotes from the motor's memory, push and hold the red button on the circuit board panel for 10 seconds. After three seconds the light will begin to blink and after the 10 seconds the light will remain on. After the light remains on, release the red button and check to ensure your remotes have been erased.

www.remotepro.com.au

WARNING

To prevent possible SERIOUS INJURY or DEATH:

- Battery is hazardous: NEVER allow children near batteries.
- If battery is swallowed, immediately notify a doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace ONLY with the same size and type battery
 - DO NOT recharge, disassemble, heat above 100° C or incinerate
- Battery will cause SEVERE or FATAL injuries in 2 hours or less if swallowed or placed inside any part of the body.

