



# Calmo

Rocker "Trios"  
Model # 031832-389



**IMPORTANT:  
RETAIN FOR FUTURE REFERENCE,  
READ CAREFULLY**

## SAFETY PRECAUTIONS



Read all instructions before assembly and use of the rocker. Keep instructions for future use.

### **WARNING**

**BEFORE ASSEMBLING THIS ROCKER, READ AND UNDERSTAND THE INSTRUCTIONS.**

**Never leave the child unattended.**

**Never use this product on an elevated surface, eg. A table.**

**This reclined rocker is not intended for prolonged periods of sleeping.**

**Always use the restraint system.**

**Do not use the reclined rocker once your child can sit unaided (approximately birth until 18kgs).**

**To avoid injury ensure that children are kept away when unfolding and folding this product.**

**Do not let children play with this product.**

**Do not move or lift this product with the baby inside it.**

**Never use the toy bar to carry the reclined rocker.**

**Do not use if any components are broken or missing.**

**KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.**

Rocker age range suitability: 0 - 6 months

Toddler Seat age suitability: 6 - 36 months

Weight limit: 18kgs.

Remove packaging from rocker vicinity after it is assembled.

Ensure your child is secured with the correctly adjusted safety harness.

Keep medication, strings, elastics, and small toys (other than the ones attached to the toy mobile) out of reach from any position of the rocker.

Ensure that proper ventilation is maintained in and around the rocker by limiting bed clothes, extra pillows or toys.

Be aware that ribbons or lace associated with bedding that may entangle the infant.

Ensure child is not positioned face down in the rocker.

When adjusting from rocking mode to stationary mode or vice versa, ensure the desired position is locked in place again after any adjustment.

The soft toys are not intended to be "mouthed" by the baby and should be positioned clearly out of reach of the baby's face and mouth.

Adjust the toy mobile to avoid being too close to the baby.

The rocker is designed for use by one baby only.

Make sure all the locking equipment is installed well before using the rocker.

**DO NOT** use the rocker on an rough surface to avoid any injury to the infant.

**DISCONTINUE USE** of rocker when infant attempts to climb out.

**DISCONTINUE USE** of rocker when infant can roll over.

**NEVER** use the toy-bar to carry the rocker.

This rocker **DOES NOT** replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.

**DO NOT** use accessories or replacement parts other than those approved by the manufacturer.

# Congratulations on your purchase of the **Calmo Rocker** "Trios"

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

## Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Calmo Rocker**



Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.



## Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

## Supplied loose in box:

Rocker Frame  
and Liner  
Assembly



x 1

Hood



x 1

Toy Bar with Toys

Awaiting new  
sample for image

x 1

### To assemble Rocker frame...

1

- 1a. Pull the Rocker Frame and Liner Assembly upwards until the rocker opens and clicks into place.



### To assemble and operate Hood...

1

- 1a. Secure back of hood over top of chair with fabric pocket.  
1b. Clip plastic clips of hood on both sides of the metal frame.



2

- 2a. To open the canopy, pull forward.  
2b. To close the canopy, pull back.



### To assemble Toy Bar...

1

- 1a. Clip the Toy Bar onto the side arms.



**NOTE:** Never attempt to lift the rocker by using the toy bar.

The rocker is now ready for use.

## To operate Stationary Position...

1


- 1a. To fix the position of the baby rocker, fold both feet downwards.



## To operate Swinging Position...

1

- 1a. In order to bring the baby rocker into swinging position, fold both feet on the metal frame upwards and put the back rest into sitting position.

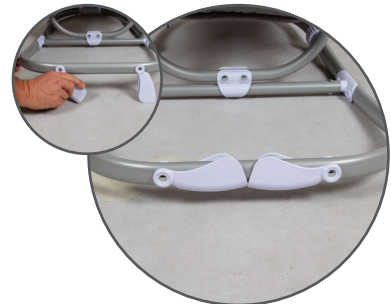

## To adjust the Backrest...

1

- 1a. To adjust the back rest inclination, operate the lever on the back rest and position it in the desired position.



2

- 2a. The back rest can be set to 3 positions.



## To operate 5 Point Harness...


1

- 1a. Always make sure to fasten the harness and secure your child when using the baby rocker.



2

- 2a. To close the seatbelt, insert both side parts of the seatbelt into the buckle centre until it audibly engages with a "clicking sound".

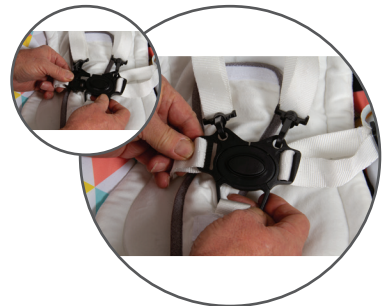

3

- 3a. Make sure that the tension is correct and the seatbelt fastening is proper.  
3b. Adjust the seatbelt length.



4

- 4a. To release the seatbelt, press the button on the top of the buckle, thereby the seatbelt side parts open automatically and you can pull your child from the seatbelt.



5

- 5a. To release shoulder straps, squeeze and pull through top of waist harness, see image opposite.



## To convert to Seat Mode...

1

- 1a. Feed harness straps through corresponding holes in lining.

Awaiting new sample for image

2

- 2a. Feed crotch cover through corresponding hole in bottom lining and under seat strengthening board.

Awaiting new sample for image

## To fold Rocker continued...

1

- 1a. Hold both the lever on the back rest and the knob on the frame side down.



2

- 2a. Fold the back rest to the front until the seat is entirely folded.





### To remove Seat Cover...

- 1
  - 1a. Remove the toy bar and hood.
  - 1b. The cover can be removed from the rocker for cleaning purposes. Bring the rocker into the topmost position.
  - 1c. Remove the seat strengthener by opening the zip at the underside of the seat and remove the wooden strengthener.



- 2
  - 2a. Open the zip at the foot of the seat.



- 3
  - 3a. Pull the cover carefully over the back rest.



**CAUTION:** The cover must not be cleaned with chemicals. Observe the care and cleaning instructions in this manual.

### To replace Seat Cover...

- 1
  - 1a. To put the cover back on the rocker, connect the cover with the lower half of the frame by closing the zip.



## To replace Seat Cover continued...

2

- 2a. In order to pull the cover above the back rest, you must bring the back rest in a 45° position.
- 2b. To do that, hold both the lever on the back rest and the knob on the frame side down and fold the rest to the front into the corresponding position.
- 2c. Pull the cover above the back rest over the adjusting lever.



2

- 2a. Fold the back rest back until it clicks into place and the cover is taut.



3

- 3a. Re-insert the seat strengthener into the opening at the back of the seat and close the zip.



### Cleaning

- To ensure the long-lasting use of your rocker, dry it with a soft absorbent cloth after use.
- The Seat Cover can be machine washed at a maximum temperature of 30° C.
- Do not dry clean, or use bleach on fabrics or trims.
- The frame should be cleaned with a soft and clean cloth with warm mild soap water.
- The metal - and plastic parts can be cleaned with a damp cloth and lukewarm soapy water.
- Do not use the spinning programme for the cover or dry it in a dryer.
- Do not use abrasive cleaners.
- Allow it to dry completely before folding or storing it away.
- Should the Baby Rocker be exposed to direct sunlight, the cover material may fade.

### Maintenance

Check rocker regularly to ensure that locking devices and components are secure and working properly. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your rocker, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.


If you have any difficulties in assembling the rocker, please contact our Service Department.

In Australia, contact **CNP Brands** on **1300 667 137**, in New Zealand contact **Wainhouse Distribution** on **0800 567 5000**.



# CNP BRANDS

CHILDCARE NURSERY PRODUCTS | EST. 1899

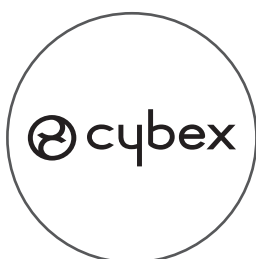

Distributed in Australia by CNP Brands  
20 Calarco Drive,  
Derrimut, VIC, 3030  
Customer Service 1300 667 137

W: [www.cnpbrands.com.au](http://www.cnpbrands.com.au)  
E: [info@cnpbrands.com.au](mailto:info@cnpbrands.com.au)  
F: [www.facebook.com/CNPBrands](https://www.facebook.com/CNPBrands)  
I: @cnp\_baby

Distributed in New Zealand by Wainhouse  
Distribution  
2-6 Argyle St, Morningside,  
PO Box 41-014,  
St Lukes, Auckland, New Zealand  
Customer Service: 0800 567 5000

E: [helpline@wainhousedist.co.nz](mailto:helpline@wainhousedist.co.nz)

