

SAFETY PRECAUTIONS



Read all instructions before assembly and use of the stroller / pram. Keep instructions for future use.

A WARNING A

TO AVOID INJURY OR DEATH:

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

USE THE TETHER STRAP AT ALL TIMES TO PREVENT THE STROLLER ROLLING AWAY.

DO NOT LEAVE CHILDREN UNATTENDED.

SECURE THE CHILD IN THE HARNESS AT ALL TIMES.

DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.

TO AVOID INJURY ENSURE THAT YOUR CHILD IS KEPT AWAY WHEN FOLDING AND UNFOLDING THE STROLLER.

ENSURE THAT ALL LOCKING DEVICES ARE ENGAGED BEFORE USE.

Check that all safety locks are engaged before placing a child in the stroller.

Ensure your child is secured with a correctly adjusted safety harness.

DO NOT allow children to stand on the seat.

DO NOT hang bags or goods from the handle as this could cause the stroller to tip over.

DO NOT place more than 3kgs in each basket, or 1kg in each hood pocket.

The weight of the child should not exceed 20kgs (each seat).

The height of the child using the stroller should not exceed 96cm.

Only use accessories recommended by manufacturer. Using non-approved accessories may be unsafe.

NEVER ride with more than two child in the stroller.

It is recommended not to use stroller on escalators and stairs for safety reasons while child is in it.

This stroller is designed for use on flat or gently slopped surfaces and may become unstable (tipping over) on uneven surfaces and slops of moderate to high elevation.

Always use safety locks.

Promptly replace worn out or broken parts.

Remove the child from the stroller before going up or down stairs and escalators.

DO NOT lift the stroller by the front bumper bar or tray (if supplied).

To prevent the risk of the stroller catching fire, do not park it near an open fire, heater or barbecue.

For warranty purposes, keep your sales receipt to provide proof of purchase.

DO NOT make any changes or alterations to this product, unless through an approved service agent.

To avoid the risk of suffocation, keep all plastic packaging materials out of reach of children.

NEVER leave safety harness connected when not fitted to a child in the stroller as this may create loops that could cause a strangulation hazard.

When seat is in the fully reclined position, the canopy must be attached and fully secured at the back of the seat frame, as this forms a safety head barrier at the top of the seat.

Ensure the storage latch is fully engaged when lifting or carrying the stroller.

CONGRATULATIONS

Congratulations on your purchase of the Dupo Twin Stroller "Cinder"

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list Assembly / Operating instructions How to care for your **Dupo Twin Stroller**



Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.




Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

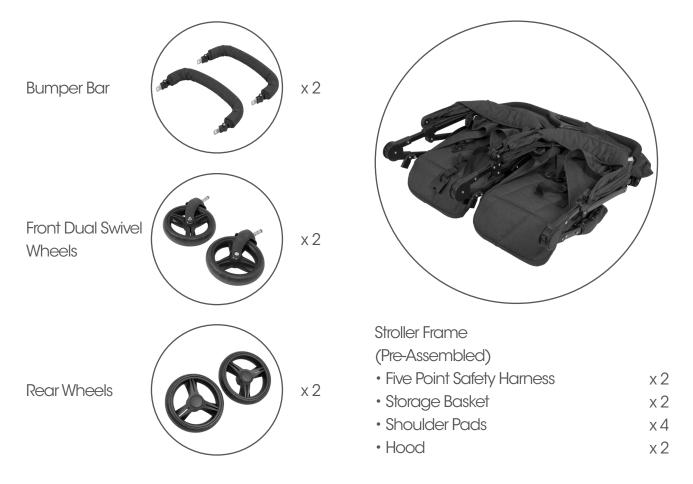

There are no accessories recommended for use with this Childcare Dupo Twin Stroller.

To unfold Stroller...



1a. Release the folding lock as shown in image.





2a.

2b.

- Lift handle and seat apart until the frame **`clicks'** and locks on both sides.
 - Ensure stroller is locked on both sides before continuing.



ENSURE CHILDREN STAY CLEAR WHEN UNFOLDING/FOLDING THE STROLLER.

To attach Front Swivel Wheels...



1a.

1b.

2a.

Insert the metal shaft of the wheel into the front wheel housing on the stroller frame until it **`clicks'** into position.

- Pull the wheel downwards to make sure it is securely attached before using stroller.
- 2b. Repeat for other Front Swivel Wheel.





Childcare

To remove Front Swivel Wheels...



2a.

2b.

1a.

1a. Press button on the top of the wheel housing.

Repeat for other Front Swivel Wheel.





To operate Swivel Function...



2

 
To lock swivel wheels, slide lever downwards until it **'clicks'**.

Pull the wheel downwards to release from housing.

1b. Repeat for other Front Swivel Wheel.



2b. Repeat for other Front Swivel Wheel.











To attach Rear Brake Housings...



2a.

1a. Slide brake housing on to rear leg until secure.





To use Rear Brake...

1a. To lock rear wheels, push down on the rear red brake pedal on the rear wheel housing with foot.

2a. To unlock rear wheels, lift the rear red brake pedal with foot.

CAUTION: Always apply rear brake when parking stroller.







To attach Rear Wheels...

- 1
- 1a. Lift the rear of the stroller slightly upwards.
- 1b. Insert the rear wheel axle into the housing until it clicks into place.



2a. 2b.

1a.

1b.

2a.

2b.

- Pull wheel outwards to check it is secure. Repeat for other Rear Wheel.

To adjust Backrest (5 positions)...



- To lower backrest, pull metal adjuster outwards and lower backrest to desired position.
- Release adjuster and check that the backrest is secure.





- To raise backrest, pull the adjuster outwards and raise backrest to desired position.
- Release adjuster and check that the backrest is secure.





To attach Canopy...

- la.
- Slide outer hood adjusters onto the outer mounting blocks until they lock into place.



2a.

Slide the inner hood adjusters onto the mounting block one at a time until they lock into place.





To adjust Canopy...



1a. To open, pull canopy forward until extended.



2a. To close, push canopy back.





CAUTION: The canopy must be fully closed before folding the stroller.

To adjust Viewing Window...

with magnets.



2

2a.

1a. To open, lift viewing window flap forward.

To close, lower back into place and flap will secure





To adjust Sun Visor...



1a. To open, lift out from front of hood.



2a. To close, push back.



 


Restraints - Harness...



To secure the child in the harness, place left hand buckle prong (b) on top of (a).







(a), (b): Left hand buckle prongs

(c), (d): Right hand buckle prongs

(e): Buckle housing

(f): Strap adjustment sliders

Once all attached, carefully adjust the harness straps by pulling each slider (f) until the desired fit is achieved in the lap, shoulder and crotch straps.

A WARNING A

USE THIS HARNESS AT ALL TIMES



4

To release the buckles, squeeze the top and bottom prongs (a) and (b), (c) and (d) together until harness disengages.


CAUTION: Always adjust the harness when changing the seating position of the child.

To adjust Waist Strap...

1

1a.

- To loosen waist strap, push up both top and bottom straps through buckle as circled in diagram.
- 1b. To place waist strap in desired position, slide the bottom strap into position then pull the top strap and tighten into position.

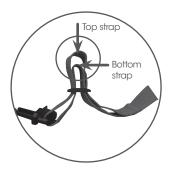

A WARNING A

USE THIS HARNESS AT ALL TIMES

Tether Strap...

1a.

- 1
- Ensure tether strap is used at all times. Make sure your hand is fed through the loop as shown to the right.



To attach Bumper Bar...



1a.

To attach the bumper bar, gently insert the bumper into the slots until they click into position.







To attach Bumper Bar continued.....

2a.

To remove, push release button on inside of mountings and pull bar outwards.



To adjust Footrest (3 positions)...



1a.

2a.

To adjust the footrest, press both buttons located at the pivot point of the footrest as shown.





Once both buttons are depressed manually adjust the footrest to the desired position.



To fold Stroller...

1a.



Ensure the both canopies are closed and the both seats are fully reclined before folding.





To fold Stroller continued...

folded.

2 2a.

3a.

4a.

Push button on plastic barrel of handle while twisting barrel forward.

Continue pushing downwards until the stroller is







3

Ensure folding lock is engaged.



Cleaning

To ensure the long-lasting use of your stroller, dry it with a soft absorbent cloth after use in rainy weather. Use a damp cloth to clean the frame. Do not use abrasive cleaners. After using your stroller on the beach, clean the frame and wheels thoroughly with water to remove the sand and salt. Allow it to dry thoroughly. Removable and non removable fabric covers and trims maybe cleaned using a damp cloth with soap or mild detergent. Allow it to dry completely before folding or storing it away. Do not dry clean, or use bleach on fabrics or trims. Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your stroller, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.

If you have any difficulties in assembling the stroller, please contact our Service Department.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

