


MIRA DLX

STROLLER
MODEL # 011232

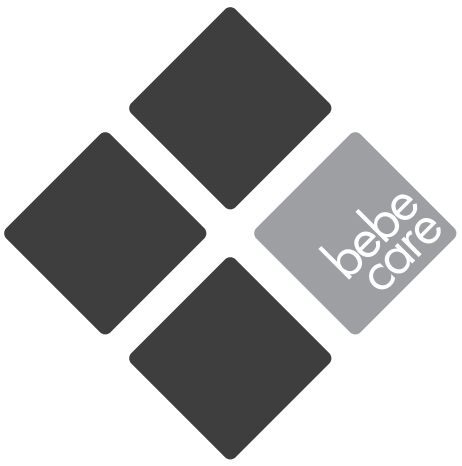

**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**

SAFETY PRECAUTIONS



Read all instructions before assembly and use of the stroller. Keep instructions for future use.

⚠ WARNING ⚠

TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

DO NOT LEAVE YOUR CHILD UNATTENDED.

SECURE THE CHILD IN THE HARNESS AT ALL TIMES.

DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.

TO AVOID INJURY ENSURE THAT YOUR CHILD IS KEPT AWAY WHEN FOLDING AND UNFOLDING THE STROLLER.

ENSURE THAT ALL LOCKING DEVICES ARE ENGAGED BEFORE USE.

Fingers or parts of the body could be injured when the stroller is being folded or unfolded. Please use caution when folding or unfolding the stroller.

Always check that safety locks are engaged before placing a child in the stroller.

Ensure your child is secured with a correctly adjusted safety harness.

DO NOT allow children to stand on the seat.

DO NOT hang bags or goods from the handle as this could cause the stroller to tip over.

DO NOT place more than 3kgs in the basket or 1 kg in the hood pocket (if supplied).

The weight of the child using the product should not exceed **20kgs**.

The height of the child using the product should not exceed **96cm**.

It is unsafe to use parts other than those approved by the manufacturer.

NEVER ride with more than one child in the stroller.

Regularly inspect all parts and locking devices, promptly replace worn out or broken parts.

NEVER leave a child in the pram/stroller when ascending or descending stairs or escalators or when travelling on other forms of transport.

To prevent the risk of the stroller catching fire, **DO NOT** park it near an open fire, heater or barbeque.

DO NOT make any changes or alterations to this product, unless through an approved service agent.

To avoid the risk of suffocation, keep all plastic packaging materials out of reach of children.

NEVER leave safety harness connected when not fitted to a child in the stroller as this may create loops that could cause a strangulation hazard.

Ensure the storage latch is fully engaged when lifting or carrying the stroller.

This stroller is designed for use on flat or gently sloping surfaces and may be unstable on higher sloping and uneven surfaces.



Congratulations on your purchase of the **Mira DLX Stroller**.

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Mira DLX Stroller**



Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.



Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands** on **1300 667 137**, in New Zealand contact **Wainhouse Distribution** on **0800 567 5000**.

Supplied loose in box:

Dual front swivel wheel



x 2

Bumper bar



x 1

Canopy



x 1

Stroller frame, with the following components pre-assembled on frame:
Rear wheels, seat liner and basket




x 1



To unfold Stroller...

1

- 1a. Hold down the stroller by the handles and release the storage lock.

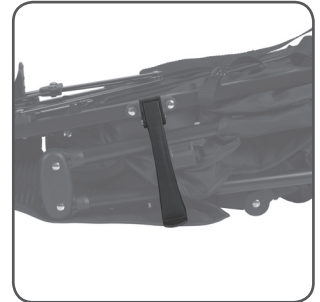

2

- 2a. Lift the handles and allow the front legs to drop towards the floor.
 2b. Do not try to open the stroller by forcing the handles apart.
 2c. Ensure the storage lock is released.



3

- 3a. Push down on the lower middle black locking bar until the frame is fully opened and locked.



IMPORTANT! Check that both the upper and lower locking bars are fully engaged

To assemble Front Swivel Wheels...

1

- 1a. Push wheel firmly onto the mounting point on the front legs.
 1b. Ensure arrow on swivel housing is pointing upwards.
 1c. Push until wheel clicks into position.
 1d. Pull back on wheel to ensure that it is secure.
 1e. Repeat for other front wheel.





To use Front Swivel Wheels...

1

- 1a. LOCK - To lock swivel function on front wheels, lift the locking clip up.
- 1b. The swivel wheels can only be locked when the wheels are in the trailing position under the frame.



2

- 2a. UNLOCK - Push the locking clip down to allow the wheels to swivel.



To use Brakes...

1

- 1a. To lock brakes, push down on each brake lever with foot.



2

- 2a. To release brakes, lift each brake lever with foot.



CAUTION! Always apply both brakes when parking stroller.



To adjust Seat Extension...

1

- 1 a. Lower the seat extension by sliding forward the release latches located underneath on both sides of the seat extension.



2

- 2 a. Raise the seat extension by lifting it until the release latches lock into place.



CAUTION! Do not adjust the extension while the child is in the chair.

To attach Canopy...

1

- 1 a. Slide the canopy clips onto the mounting brackets on the stroller frame.



2

- 2 a. Attach the Velcro pads to the side of the seat frame.
2 b. Fit hood corner press studs to hood hinge.





To adjust Canopy...

1

1a. To open the canopy, pull the canopy forwards.



2

2a. To close the canopy, pull the canopy back.



To adjust Sunvisor...

1

1a. To open the sunvisor, pull it downwards

1b. To close the sunvisor, fold it back up into the hood.



To extend Mesh Canopy...

1

1a. The canopy can be adjusted forward or backward to allow ventilation through the mesh section.





To attach Bumper Bar...

1

- 1a. Align the bumper bar ends with the locking buttons on the sides of the armrest moulds of the stroller frame.
- 1b. Push inwards until they "click" and lock into position on each side.
- 1c. To remove bumper bar, push both locking buttons in and pull the bumper bar out.



To use Tether Strap...

1

- 1a. Ensure tether strap is used at all times.
- 1b. Make sure your hand is fed through the loop as shown in the diagram.



⚠ WARNING ⚠

USE THIS STRAP TO STOP THE PRAM/STROLLER ROLLING AWAY.

The stroller is now ready for use.



Restraints - Harness...

1 To secure the child in the harness, place left hand buckle prong (b) on top of (a).

2 Hold both left hand buckle prongs (a) and (b) together and insert it into buckle housing (e) until it snaps into position.

3 Repeat previous steps for right hand buckle prongs (c) and (d).

4 Once all attached, carefully adjust the harness straps by pulling each slider (f) until the desired fit is achieved in the lap, shoulder and crotch straps.

5 To release the buckles, squeeze the top and bottom prongs (a) and (b), (c) and (d) together until harness disengages.



(a), (b): Left hand buckle prongs
 (c), (d): Right hand buckle prongs
 (e): Buckle housing
 (f): Strap adjustment sliders

! WARNING !

USE THIS HARNESS AT ALL TIMES


CAUTION: Always adjust the harness when changing the seating position of the child.



To adjust Harness Straps...

1

- 1a. To adjust straps, hold the strap with one hand and slide the adjuster up or down the strap.
- 1b. Sliding the adjuster down will loosen the strap, while sliding the adjuster up will tighten the strap.

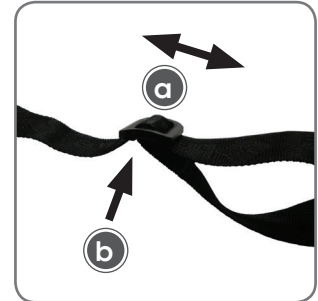

(a): Slide up or down
(b): Adjuster

To adjust Backrest...

1

- 1a. To lower the backrest; pull backrest adjusting lever upwards and lower to desired position.
- 1b. Release lever.
- 1c. To raise the backrest, push the backrest upwards to desired position.



CAUTION! Do not adjust the backrest while the child is in the chair.

IMPORTANT! This stroller has an adjustable backrest. The upright position on the backrest is not suitable for use with children less than 6 months old. For use with a newborn (0-6mths), the seat should be fully reclined. The backrest should only be adjusted to a more upright position as the child grows older and is able to support their head without assistance.



To fold Stroller...

1

- 1a. Before folding the stroller, close the hood, the hood extension and position the seat to an upright position (not reclined).
- 1b. Place your foot underneath the frame and lift until the frame is unlocked as shown right.
- 1c. Alternatively you can unlock this mechanism with your hand by lifting the tab.

**2**

- 2a. Locate the black lever on the right side of the stroller and push it down.
- 2b. This will unlock the secondary locking mechanism.
- 2c. Push down on the handle to commence folding the unit.
- 2d. Once the fold is complete, push down on the stroller to engage the folding locks.



The stroller is now ready for travel or storage.



Cleaning

To ensure the long-lasting use of your stroller, dry it with a soft absorbent cloth after use in rainy weather. Use a damp cloth to clean the frame. Do not use abrasive cleaners. After using your stroller on the beach, clean the frame and wheels thoroughly with water to remove the sand and salt. Allow it to dry thoroughly. Removable and non-removable fabric covers and trims may be cleaned using a damp cloth with soap or mild detergent. Allow it to dry completely before folding or storing away. Do not dry clean or use bleach on fabrics or trims. Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Maintenance

Check stroller regularly to ensure that locking devices and components are secure and working properly. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your stroller, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**. If the wheels squeak, use silicone based spray or light oil ensuring it penetrates the wheel and axle assembly. To prevent mould or mildew, do not fold or store the product if it is damp or wet. Allow it to dry thoroughly. Always store the product in a well ventilated area and away from direct sunlight.


If you have any difficulties in assembling the stroller, please contact our Service Department.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.



CNP BRANDS

CHILDCARE NURSERY PRODUCTS | EST. 1899

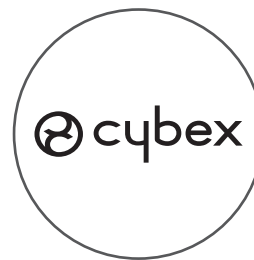

Distributed in Australia by CNP Brands
20 Calarco Drive,
Derrimut, VIC, 3030
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: @cnp_baby

Distributed in New Zealand by Wainhouse
Distribution
2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

