



Pendule

Cradle Swing "Trios"
Model # 037704-389



**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**

Read all instructions before assembly and use of the swing. Keep instructions for future use.

WARNING

BEFORE ASSEMBLING THIS SWING, READ AND UNDERSTAND THE INSTRUCTIONS.

Never leave the child unattended.

Never use this product on an elevated surface, eg. A table.

This swing is not intended for prolonged periods of sleeping.

Always use the restraint system.

Do not use the swing once your child can sit unaided (approximately 3 months until 9kgs).

Do not let children play with this product.

Do not move or lift this product with the baby inside it.

Do not use if any components are broken or missing.

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

Make sure all the locking equipment is installed well before using the swing.

DO NOT use the swing on any rough surface to avoid any injury to the infant.

DISCONTINUE USE of swing when infant attempts to climb out.

DISCONTINUE USE of swing when infant can roll over.

NEVER use the toy-bar to carry the swing.

Age range suitability: 3 months up to 9kgs.

This swing **DOES NOT** replace a cot or a bed. Should your child need to sleep, then they should be placed in a suitable cot or bed.

DO NOT use accessories or replacement parts other than those approved by the manufacturer.

Battery Safety Information

In exceptional circumstances, batteries leak fluids that can cause a chemical burn injury or ruin your product. To avoid leakage:

- **DO NOT** mix old and new batteries or batteries of different types: alkaline, standard (carbon zinc) or rechargeable (nickle-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use.
- **ALWAYS** remove exhausted batteries from the product.
- Dispose of batteries safely.
- **DO NOT** dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same equivalent type and polarity, as recommended.
- **DO NOT** charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

WARNING

- **Transformers used with the swing are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.**
- **The swing shall only be used with the recommended transformer with 6V / 0.3A.**
- **The transformer is not a toy.**
- **The swing is not to be connected to more than one power supply.**

Congratulations on your purchase of the **Pendule Cradle Swing "Trios"**

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Pendule Cradle Swing**



Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.


Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

Seat Liner (with head hugger pre-assembled)

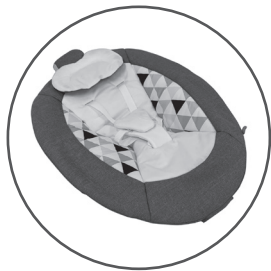


x 1

Main Frame (with seat arm pre-assembled)




x 1

Seat Frame Top

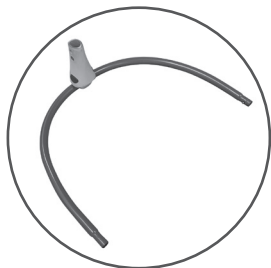

x 1

Leg Tubes

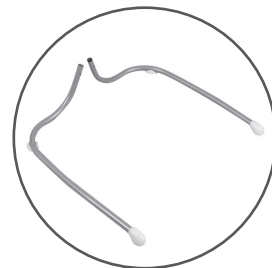

x 2

Seat Frame Bottom (vibration module pre-assembled)



x 1

Toy Bar (with 3 x soft toys pre-assembled)



x 1

USB Power Cable



x 1

There are no accessories recommended for use with this Childcare Swing.

To assemble Frame...

1


1a. Lay the **Main Frame** down on its side.



2

2a. Align one **Leg Tube** with the leg connection housing at the bottom of the **Main Frame**.

2b. Insert **Leg Tube** into the leg connection housing until it 'clicks' into place and the push-pins are secure.

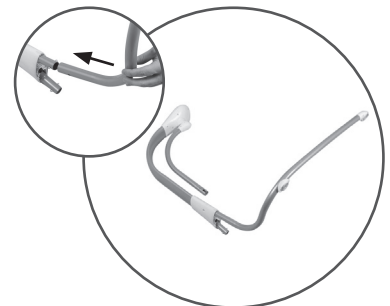

3

3a. Turn frame over and repeat for remaining **Leg Tube**.




To assemble Seat Frame...

1

1a. Lay **Seat Liner** face down.

1b. Feed the **Top Seat Frame** inside the top end of the seat liner, as shown in image.

1c. The seat frame connection housing must be facing down.

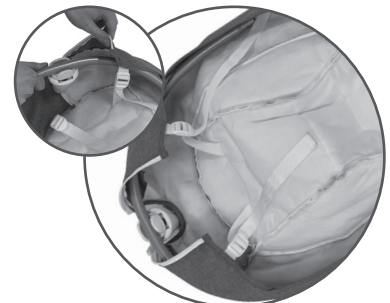


IMPORTANT: You must feed the frame behind the webbing strap and buckle as shown in image.

To assemble Seat Frame continued...


2

- 2a. Feed the **Bottom Seat Frame** (with vibration module pre-assembled) inside the bottom end of the seat liner.
- 2b. **Ensure** the vibration module is showing through the designated hole in the seat liner.
- 2c. Connect the top and bottom seat frames together via the push pins.
- 2d. Secure zipper

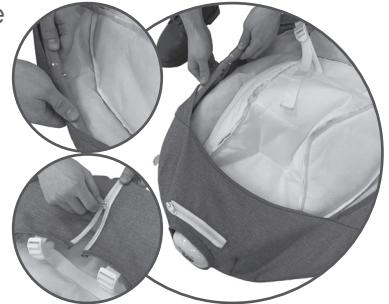


3

- 3a. Align the **Seat Frame** connection housing with the seat arm of the **Main Frame**.

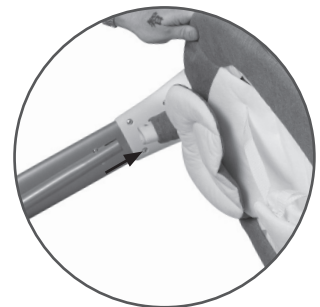

4

- 4a. Insert the seat arm into the **Seat Frame** connection housing until it 'clicks' into place and the push-pins are secure.

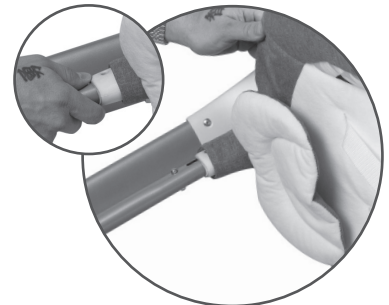

5

- 5a. Stand swing upright.



To assemble Toy Bar...

1

- 1a. Align the **Toy Bar** with the slots at the front of the seat arm.



2

- 2a. Insert the **Toy Bar** into the slots until it 'clicks' into position.




NOTE: Toy bar and toys should only be assembled by an adult.

To use Harness...

1


- 1a. To close the harness, insert both the left and right buckles into the buckle housing.
- 1b. Re-secure crotch pad with Velcro tab over the buckle housing.
- 1c. Adjust the harness waist straps with the waist strap adjuster until the fit is secure.
- 1d. Adjust the harness shoulder straps with the shoulder strap adjusters, located under the seat, until the fit is secure.
- 1e. To release the harness, push the button on the buckle housing.

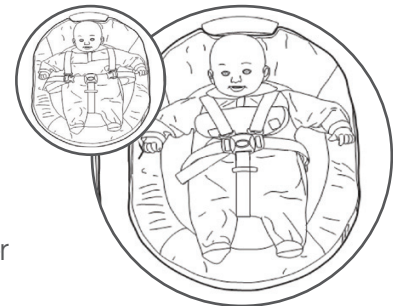

NOTE: Always ensure to fasten the harness and secure your child correctly when using this product.

To operate Seat Adjustment...

- 1
 - 1a. This swing has 2 seat recline positions.
 - 1b. To adjust the swing recline positions, operate the seat adjustment buttons whilst tilting the seat to the desired position.
 - 1c. Ensure the seat 'clicks' into position securely.

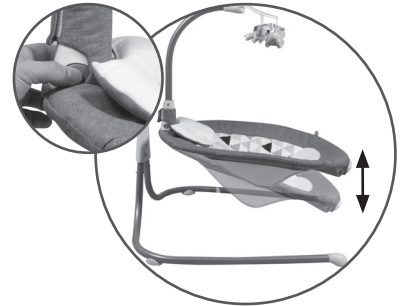

To operate Seat Direction...

- 1
 - 1a. This swing has 3 seat facing directions.
 - 1b. To adjust the seat direction, hold the end of the seat with both hands.



- 2
 - 2a. Twist the seat and seat arm left or right to the desired position.
 - 2b. Ensure the seat 'clicks' into position securely.



To Power Swing (Battery Power)...

- 1
 - 1a. Locate the battery compartment on the top of the **Main Frame Module**.
 - 1b. Unscrew the battery compartment cover using a Phillips head screwdriver (not supplied).
 - 1c. Install 4 x AA (1.5V) batteries. Ensure the batteries are facing the correct polarity.
 - 1d. Replace and secure the battery compartment cover.




To Power Swing Continued (Power Cable)...

1

- 1a. Insert power cable into the swings power input, located on the underside of the **Main Frame** leg connection housing.

NOTE: Power cable will override battery power when plugged into the swing.

If you are using the swing on battery power, disconnect the power cable from swing.

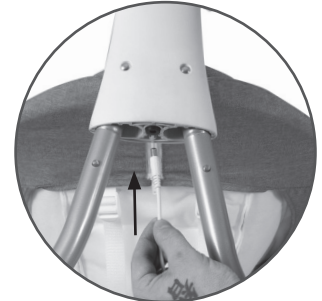

To operate Swing Speed...

1

- 1a. To turn swing on/off, press the 'power' button.
1b. To adjust the swing speed, press the + and - buttons.

NOTE: There are 5 swing speeds.



To operate Musical Melodies...

1

- 1a. To begin playing musical melodies, press the 'music' button.
1b. To increase the volume, press the 'music' button again. (There are 4 volume settings).
1c. To change musical melody, cycle through all 4 volume settings of the current melody until music stops.
1d. Press the music button again. A new musical melody will start.

NOTE: There are 12 musical melodies.



To operate Auto Off Timer...

- 1
 - 1a. This swing has 3 auto off timer settings that will turn the swing and musical melodies off automatically. Push the 'auto off timer' button:
 - 1b. Once for 8 minutes.
 - 1c. Twice for 15 minutes.
 - 1d. Three times for 30 minutes.
 - 1e. To cancel the auto off timer feature, press the auto off timer button until the LED indicator turns off.



To operate Vibration Module...

- 1
 - 1a. Locate the zip under the foot end of the seat frame. Unzip to gain access to the vibration module battery compartment.
 - 1b. Unscrew the battery compartment cover using a Phillips head screwdriver (not supplied).
 - 1c. Install 1 x D (1.5V) battery. Ensure the battery is facing the correct polarity.
 - 1d. Replace and secure the battery compartment cover.
 - 1e. Close the access zip.
- 2
 - 2a. This vibration module has 3 vibration settings.
 - 2b. Move slider left to the desired vibration setting.
 - 2c. Move slider to the far right to turn off vibrations.





Cleaning

To ensure the long-lasting use of your swing, dry it with a soft absorbent cloth after use. Use a damp cloth to clean the frame. Do not use abrasive cleaners. Allow it to dry completely before folding or storing it away. Do not dry clean, or use bleach on fabrics or trims. Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Maintenance

Check swing regularly to ensure that locking devices and components are secure and working properly. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your swing, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.

If you have any difficulties in assembling the swing, please contact our Service Department.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.



CNP BRANDS

CHILDCARE NURSERY PRODUCTS | EST. 1899

About CNP Brands

Currently, **CNP Brands** boasts one of the most diverse brand portfolios with a combination of company owned brands and distribution agreements. These include distribution lines for **Evenflo, Good Baby, Lascal, Maclaren, Project Nursery, Summer Infant and Yookidoo.**

Our own brands, including **Childcare**, have gone from strength to strength in recent years. **Childcare**, and our premium brand **bebe care**, demonstrate our commitment to quality and continuing investment in product development.





A series of horizontal dotted lines for writing notes.

NOTES




A series of horizontal dotted lines for writing notes.



CNP BRANDS

CHILDCARE NURSERY PRODUCTS | EST. 1899

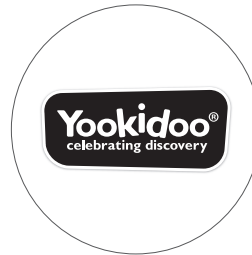

Distributed in Australia by CNP Brands
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: @cnp_baby

Distributed in New Zealand by Wainhouse
Distribution

2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

