



Cambridge

Cot

Model # 091008



**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**

Read all the instructions before assembly and use of the cot. Keep instructions for future use.

⚠ WARNING ⚠

ADULT ASSEMBLY REQUIRED:

DUE TO THE PRESENCE OF SMALL PARTS DURING ASSEMBLY, KEEP OUT OF REACH OF CHILDREN UNTIL ASSEMBLY IS COMPLETE.

TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.

RECOMMENDED MATTRESS SIZE:

1300 MM LONG X 690 MM WIDE X 100-150 MM THICK.

FOLLOW THE MANUFACTURER'S ASSEMBLY INSTRUCTIONS TO ENSURE THE SAFETY FEATURES OF THE COT ARE NOT COMPROMISED.

Use only accessories as recommended by the supplier.

Failure to follow warnings and instructions could result in serious injury or death.

This cot has been manufactured for one child only, with a maximum weight of **18kgs**.

The drop side must be raised when the child is unsupervised.

When the mattress base is assembled in the lower position, ensure the higher cot base holes are covered tightly with the filling bolts supplied. This is to prevent finger entrapment, swallowing and inhalation hazards.

ENSURE the cot is placed at a reasonable distance from curtains, blinds, heaters and power points.

ENSURE the cot is completely assembled and check that all parts are securely tightened before placing the child into the cot.

ENSURE medication, string, elastic, small toys or small items such as money etc are always kept out of the child's reach when in the cot.

DO NOT over tighten bolts/screws.

ENSURE that the child is clear of any moving parts when adjusting the cot.

For warranty purposes, keep your sales receipt to provide proof of purchase.

RECOMMENDED MATTRESS SIZE (SOLD SEPARATELY):

THIS COT HAS BEEN MANUFACTURED FOR USE WITH A MATTRESS WHICH MEASURES 1300 MM LONG BY 690 MM WIDE AND 100-150 MM IN THICKNESS.

The width and length are specified because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40 mm when the mattress is pushed to one side or end, and 20mm when the mattress is centred in the cot.

This is to minimise the risk of a child's limb becoming caught in the gap.

The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500 mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot.

SUFFOCATION HAZARD – Infants can suffocate;

- In gaps between an extra pad or mattress.
- In soft bedding.

To reduce the risk of Sudden Infant Death Syndrome (SIDS), paediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.

Congratulations on your purchase of the **Cambridge Cot.**

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Cambridge Cot**







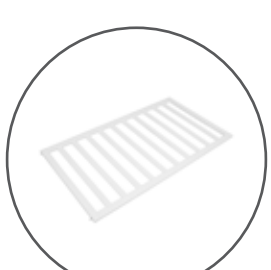

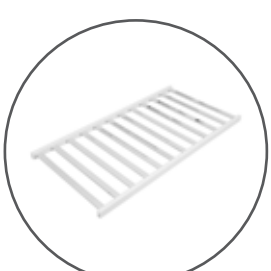

Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

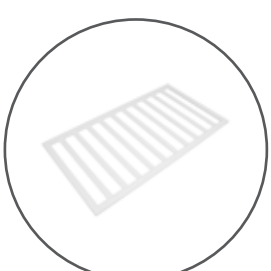End Panel		x 2	Filling bolt & nut (pre-assembled)		x 8
Fixed side panel (with pre-assembled teething rails)		x 1	Cot assembly bolt		x 8
Drop side panel (with pre-assembled teething rails)		x 1	Allen key		x 1
Mattress base		x 1	Castors		x 4

Recommended use with 115282-003 Inner Spring Mattress - White.

- a. It is advisable that two people assemble the cot in the room in which it is to be used.
- b. As small parts are involved in assembly, children should be kept clear of the assembly area.
- c. Dispose of all packaging material immediately after the cot is assembled.
- d. Identify all parts and components.
- e. Clear an area on the floor for assembly and place a sheet on the floor to ensure the cot is not scratched during assembly.

⚠ WARNING ⚠

DO NOT OVERTIGHTEN BOLTS. OVERTIGHTENING BOLTS CAN CAUSE PANELS TO CRACK.

To fit the Drop Side Panel...


1

- 1a. With one end panel standing upright, attach one side of the drop side panel by guiding the pin on its upper corner into the hole located at the top of the upper drop side mechanism slot.
- 1b.



2

- 2a. Guide the pin on the bottom of the drop side panel into the hole located at the top of the lower drop side mechanism slot.

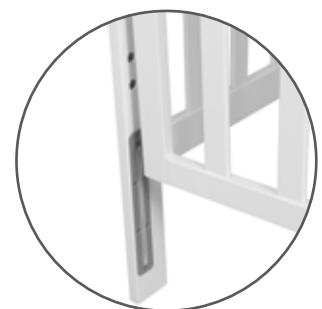

3


- 3a. Repeat to attach the other side of the drop side panel to the second end panel.



To assemble Mattress Base...

1

- 1a. Lie cot down onto the Drop Side panel.
- 1b. Attach one end of the mattress base to one end panel using two cot assembly bolts.

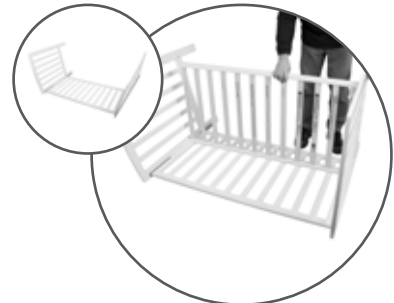

2

- 2a. Secure with allen key but do not tighten bolts completely.
- 2b. Repeat for other end of mattress base.



To assemble Fixed Side Panel and Castors...

1

- 1a. Slide the fixed side panel between the two end panels and attach using the remaining four cot assembly bolts.
- 1b. Insert a castor into housing on each cot leg.



2

- 2a. Stand cot upright.
- 2b. Tighten all eight cot assembly bolts.



The cot is now ready for use.

To operate Drop Side Panel...

1

To Lower Drop Side Panel

- 1a. To lower the drop side panel; lift upwards and press both silver pins simultaneously on the left and right of the drop side panel.
- 1b. The panel will then slide down freely.
- 1c. For safety, do not force the drop side panel to go any lower.



2

To Raise Drop Side Panel

- 2a. To raise the drop side panel, lift it to the highest position.
- 2b. The drop side panel will lock into position.



Mattress Base Heights...

Mattress base in High Position

The base height is set for when your baby is young and cannot sit up unaided.



Mattress base in Low Position.

This is the normal position for an active baby who can sit up unaided.




PLEASE NOTE! The cot comes with filling bolts already located in the lower holes of the end panels. If changing the mattress base from the upper to the lower position, you must swap over the filling bolts. It is important that the filling bolts are replaced into the opened holes. Ensure they are secured tightly with the allen key and check regularly that they do not loosen.

For safe transit, the drop side panel is fitted with rubber cap protectors over each protruding pin. Please remove the rubber caps prior to assembly, and dispose of immediately to avoid them becoming a swallowing/choking hazard.

To lower Mattress Base Height...

1

- 1a. Lay down the cot on the fixed side panel.
- 1b. Remove the two lower filler bolts and nuts from each of the end panels.

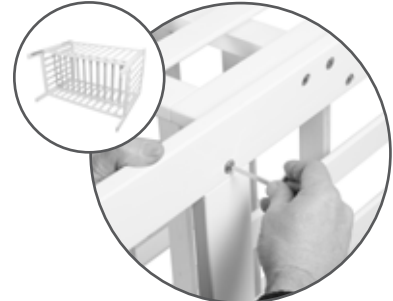

2

- 2a. Remove the four mattress base bolts from the end panels.
- 2b. Carefully slide the base to match the lower holes and replace mattress base bolts.



PLEASE NOTE! Re-fit filling bolt and nut to the higher base positions to prevent possible finger entrapment.



Cleaning

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

To ensure the long-lasting use of your cot, wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean dry place.

Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your cot, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.

If you have any difficulties in assembling the cot, please contact our Service Department.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.



A series of horizontal dotted lines spanning the width of the page, intended for writing notes.




A series of horizontal dotted lines spanning the width of the page, intended for writing notes.



CNP BRANDS

CHILDCARE NURSERY PRODUCTS | EST. 1899

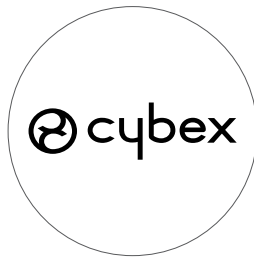

Distributed in Australia by CNP Brands
20 Calarco Drive,
Derrimut, VIC, 3026
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: @cnp_baby

Distributed in New Zealand by Wainhouse
Distribution
2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

